



Pico Wireless Programming Guide for Serena and Triathlon Shades/Blinds


Roller shade button

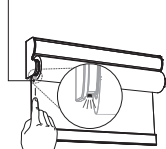

Honeycomb shade button

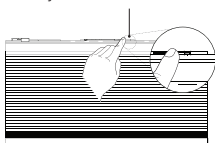

Wood blind button

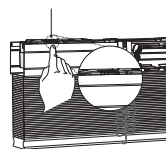

Assign a Pico Wireless Control to the Shade/Blind

1. Tap the shade/blind button on all shades/blinds you want assigned to the control. The shade/blind button illuminates green.
2. Hold the **Close** or **Privacy (Close) button** on the Pico wireless control for about 10 seconds until the shade/blind button blinks and turns off.

Adjust the Shade's Upper and Lower Limits/Blind's View and Privacy Slat Positions (Note: Shade/Blind must be assigned to control.)



Upper Limit/View Slat Position

1. Follow Steps 1- 3 of the Lower Limit/Privacy Slat Position steps to adjust for the Upper Limit/View Slat Position.
2. Hold the **Open** or **View** button on the Pico wireless control for about 10 seconds until the shade/blind button blinks and turns off.

Lower Limit/Privacy Slat Position

1. Tap the shade/blind button on the shade/blind you want to adjust. The shade/blind button illuminates green.
2. Simultaneously, hold the **Open** and **Raise** buttons or **View (Open)** and **Jog-Open** buttons on the Pico wireless control for about 10 seconds, until the shade/blind button blinks and remains lit.
3. Use the Pico wireless control's **Raise** and **Lower** buttons to adjust the shade position to the lower limit you prefer or the **Jog-Open** and **Jog-Closed** buttons to position the blind slats as desired.
4. Hold the **Close** or **Privacy (Close) button** on the Pico wireless control for about 10 seconds until the shade/blind button blinks and turns off.

Pico Wireless Programming Guide for Serena and Triathlon Shades/Blinds

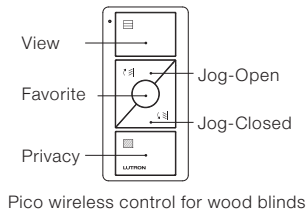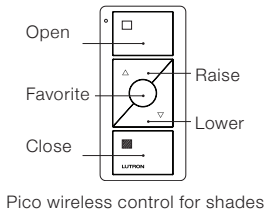

Set a Favorite Level for Shades/Blinds

(Note: Shade/Blind must be assigned to control.)

1. Use the control's **Raise** and **Lower** buttons to adjust the shade to desired level or **Jog-Open** and **Jog-Closed** buttons to move the blind slats to the desired position.
2. Hold the **Favorite** button on the Pico wireless control for about 10 seconds until the shade/blind button blinks.

Restoring Shades/Blinds to Factory Default

(Note: This step will remove any controls assigned to the shade/blind. It will not affect the shade's upper and lower limits/blind's view and privacy slat position.)

1. Tap the **shade/blind** button quickly three times and hold the **shade/blind** button after the third tap until the shade/blind button LED blinks green rapidly.
2. Immediately tap the **shade/blind** button quickly three more times, until the shade/blind button LED blinks green rapidly, then blinks red/green three times, and turns off.