

Back Cover for Insulating Honeycomb Shade


English

1 Prepare to Install


CAUTION: RISK OF FALLING OBJECTS: Securely install the shade system per the mounting instructions. Failure to do so could result in minor or moderate injury.

1.1 Included Components:


(1) Back Cover with brush strip

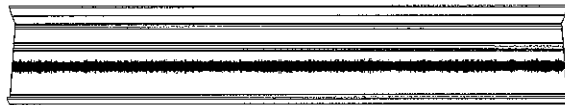

Adhesive dots (type and quantity may vary)



1.2 Verify Correct Size

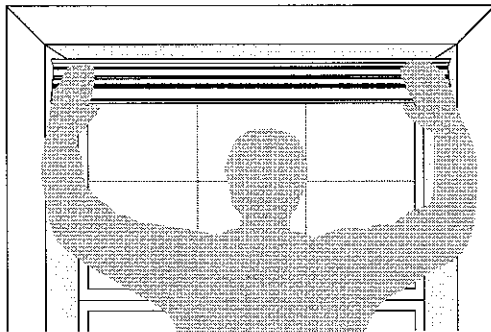


Hold the back cover up to the window to make sure it fits inside the window frame.

1.3 Apply Adhesive

Remove adhesive dots from backing strip one at a time and apply them to the top surface of the Back Cover, evenly spaced. Press firmly.


NOTE: If your shade is less than 21% in (549 mm) wide, reserve two (2) adhesive dots for bracket spacer mounting. Refer to section 3, item b.

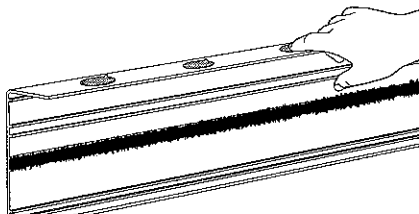

2 Mount the Back Cover


2.1 Expose Adhesive

Remove the protective material from each adhesive dot applied in step 1.3.

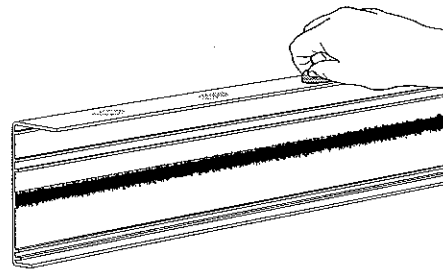


2.2 Attach the Back Cover to the Window Frame

Press the Back Cover to the inside top window frame, ensuring that it is straight and parallel to the front edge of the framing. Press firmly.

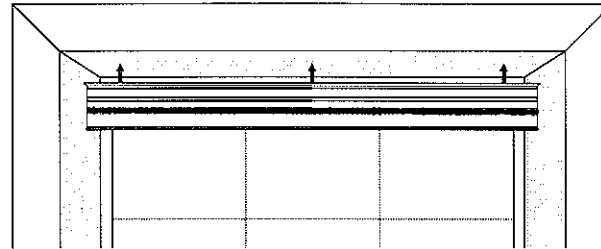


3 Install Shade

Install your Lutron Insulating Honeycomb shade according to the installation instructions provided with the shade. The Back Cover is designed to integrate with the installation of brackets and shade as shown in the following pictures:

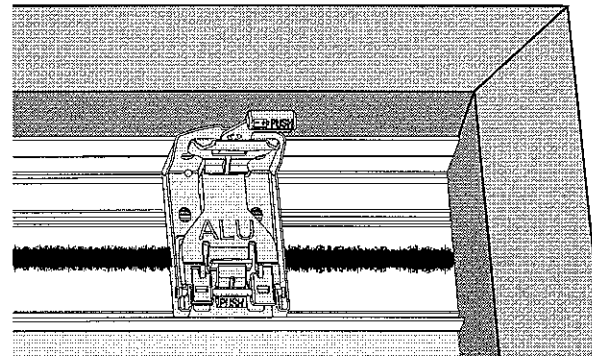


a. The brackets are mounted nestled in the Back Cover, with mounting screws driven through the top of the cover. There is a groove scored in the underside of the cover's top to aid in pre-drilling and fastening.

SIDE VIEW

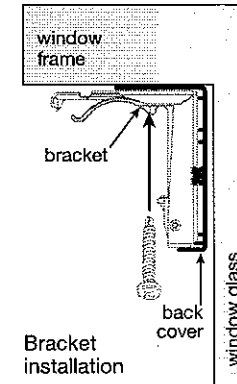


Bracket installation

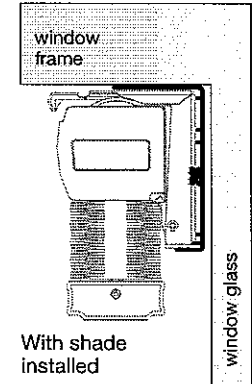


With shade installed

b. Shades that are less than 21% in (549 mm) wide include a set of bracket mounting spacers that must be installed between the Back Cover and the shade brackets, as shown. Use adhesive dots reserved in Step 1.3 to attach one spacer to the backside of each bracket before mounting.

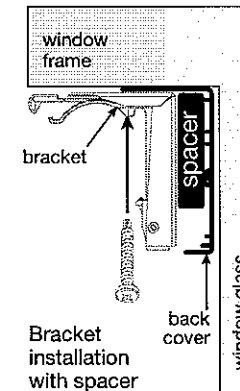

Bracket installation with spacer

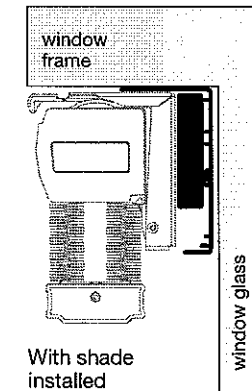

With shade installed

Worldwide Headquarters | USA
Lutron Electronics Co., Inc.
7200 Suter Road
Coopersburg, PA 18036-1299 USA
TEL: 1.610.282.3800
FAX: 1.610.282.3090
Technical Support: 1.800.523.9466
Toll Free: 1.888.LUTRON1
EMAIL: shadinginfo@lutron.com
WEB: www.lutron.com/shadingsolutions

Europe Headquarters | United Kingdom
Lutron EA Ltd
6 Sovereign Close
London, E1W3JF, UK
TEL: +44.(0)20.7702.0657
FAX: +44.(0)20.7480.6899
Technical Support: +44.(0)20.7690.4481
FREEPHONE: 0800.282.107